

Event User Instructions



The event display boards are supplied with a fabric carry bag



Remove top and bottom panels from fabric carrying bag



Unfold the bottom panels



Slide the locking clips into the Event cross bar



Position the top Event display boards onto the bottom panels & lock into place



Position your Event display board in your portable display area and it is ready to use